

AUTO SCALE SHUTOFF

1. Turn scale head, wireless remote, and wireless toggle switch on.
-The main screen showing gross and tare weight will display.
2. Press and release scroll on the wireless remote.
-The setting for the dispense weight and door selection (front or rear) will display.
3. Press and hold scroll until the weight value starts to flash.
4. Using the up and down arrows just below the display in the center of the remote, adjust the desired dispense weight, use the “Tare” button to select which digit to adjust.
5. Press and release scroll. The door setting will flash.
6. Using the up and down arrows just below the display in the center of the remote, select which door you wish to dispense from.
7. When settings are acceptable press and hold scroll for 2 seconds. The main screen will display again.
8. Press conveyor start to dispense the set amount of seed from the desired door.
The door will automatically shut when the set amount of seed is dispensed and the conveyor will turn off shortly after.
9. To dispense the same amount of seed from the same door, again press conveyor start, then repeat the dispense cycle. If the remote is turned off, steps 1-8 will need to be repeated.

Select “Tare” to adjust which digit to adjust.

