


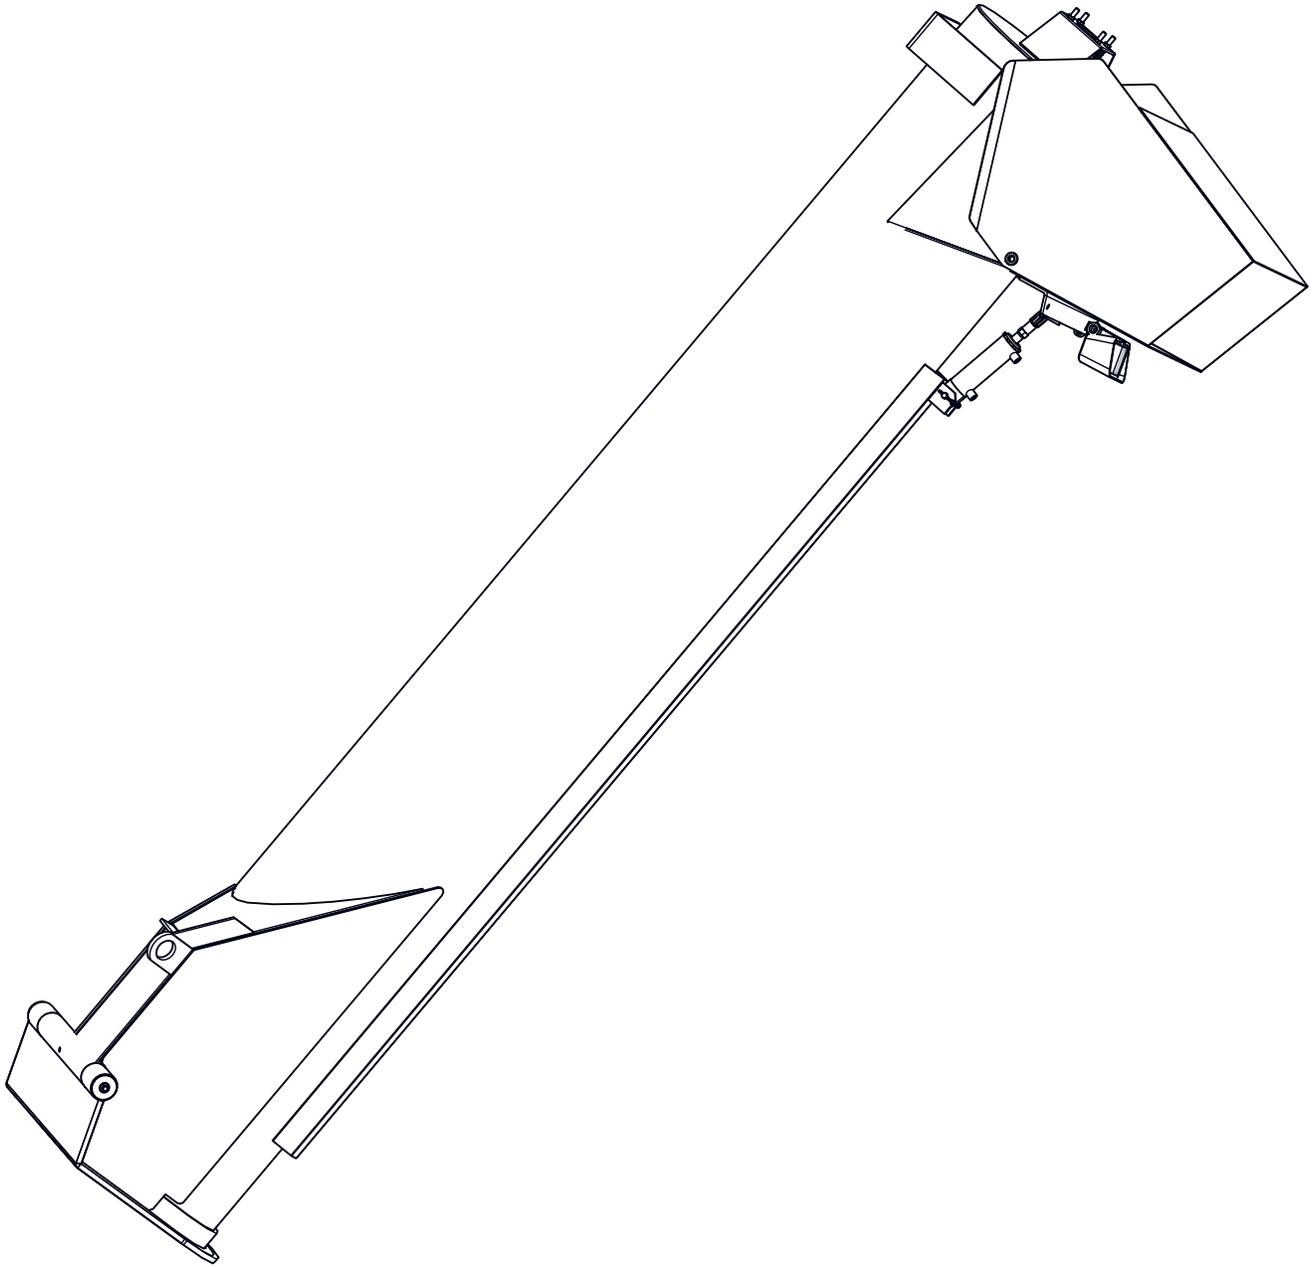

# ADJUSTING THE UPPER AUGER



J&M Manufacturing  
419-375-2376  
284 Railroad St.


## Extend The Auger



Extend the auger into the unload position. Engage the upper auger into the lower auger by rotating the driveline.



# Parts Description

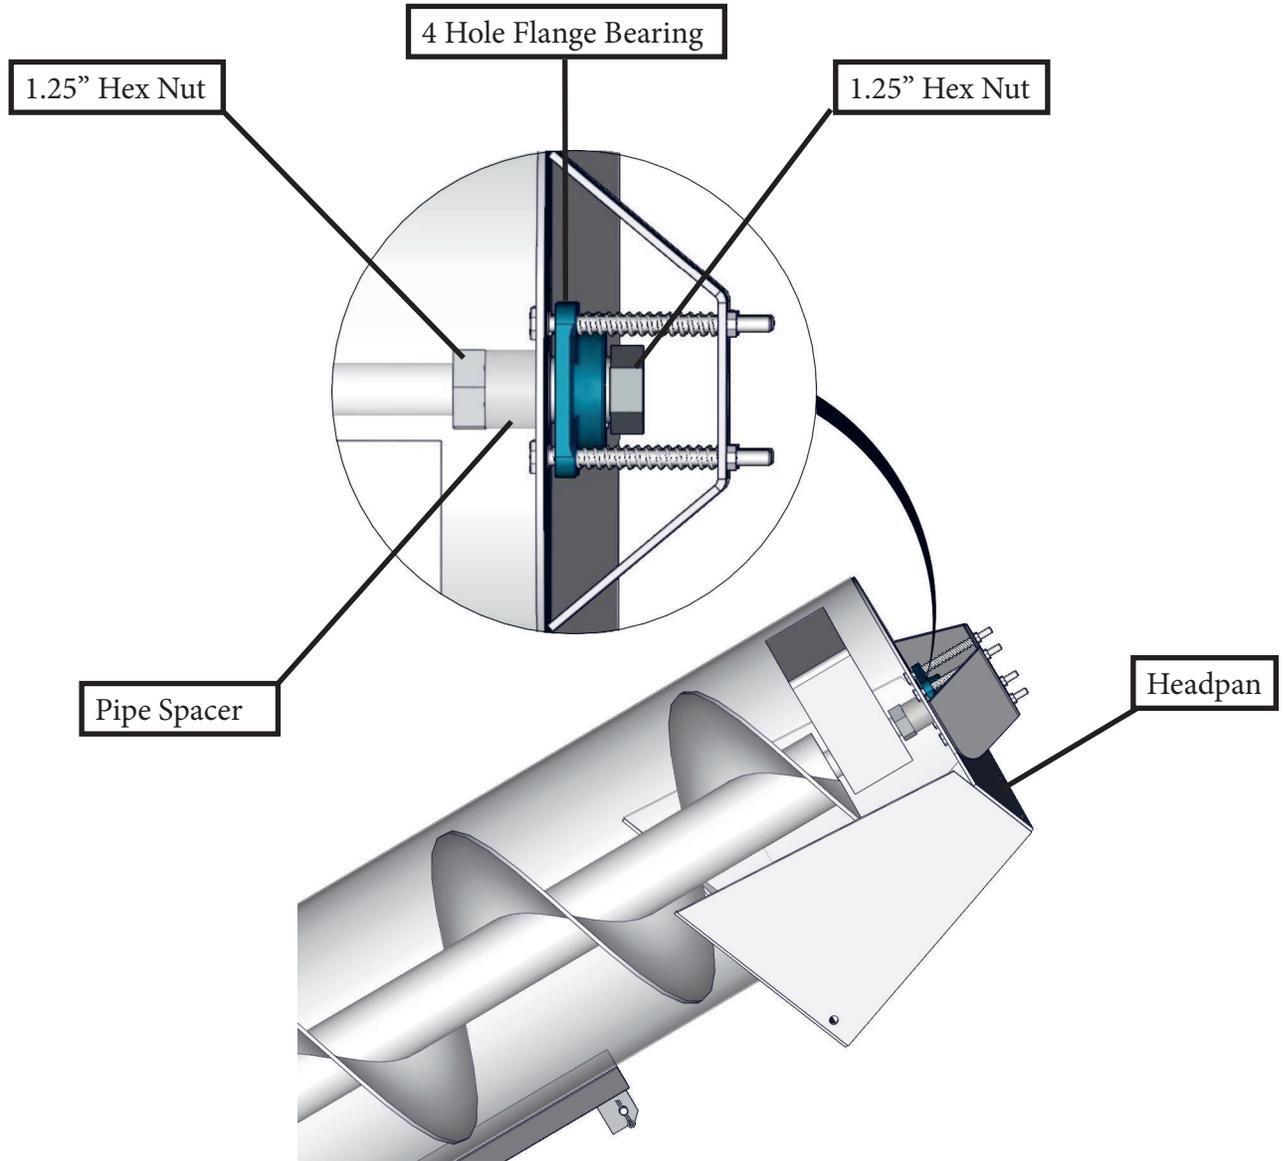

# Adjustment

