




Manual

Adjusting Upper Auger

SERVICE MANUAL

Standard and
Slider

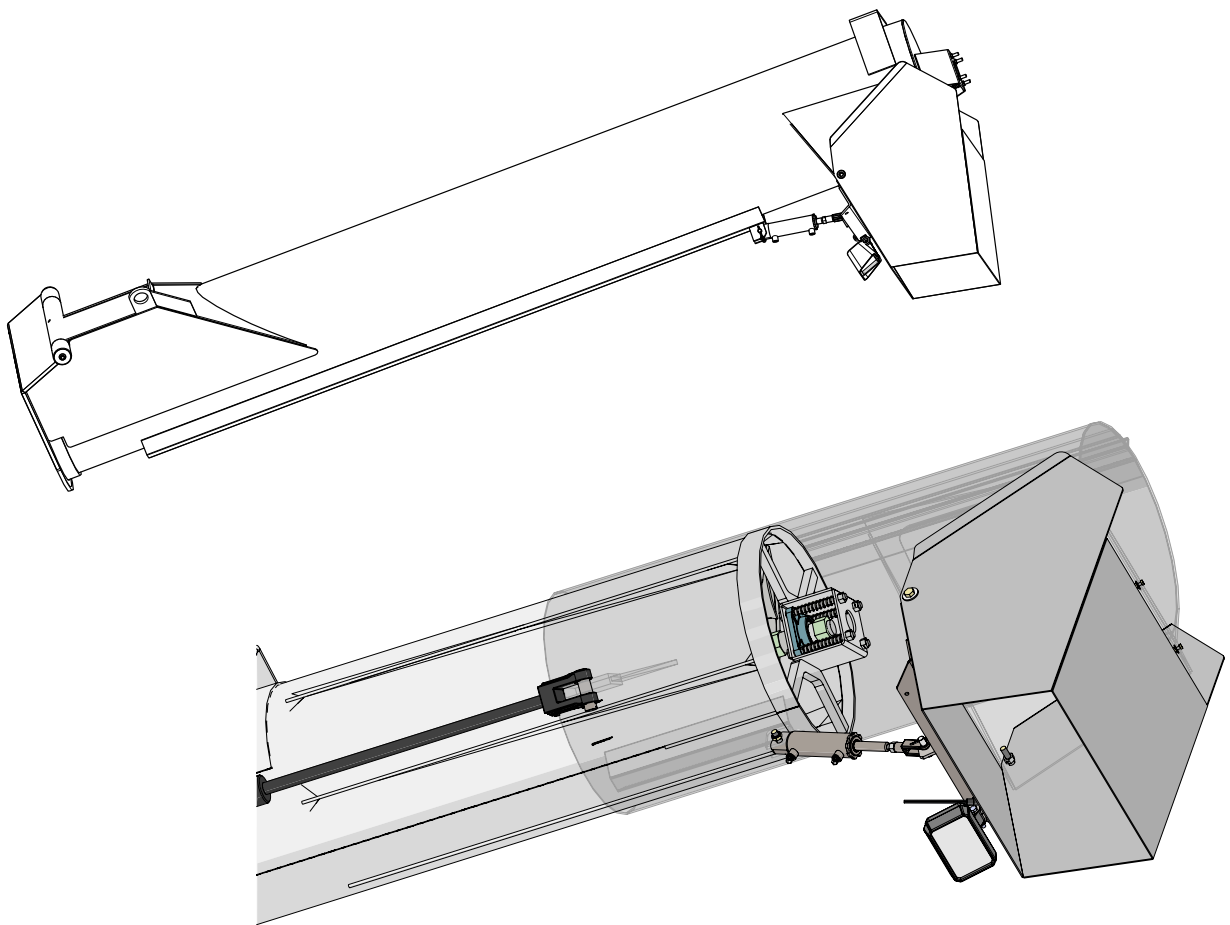

Rev. 5.5.2022

J&M Manufacturing Co, Inc

284 Railroad Street - P.O. Box 547 | Fort Recovery, OH 45846 | Ph: (419) 375-2376 | Fax: (419) 375-2708


www.jm-inc.com

Extend the Auger




Extend the auger into the unload position. Engage the upper auger into the lower auger by rotating the driveline.

Parts Description

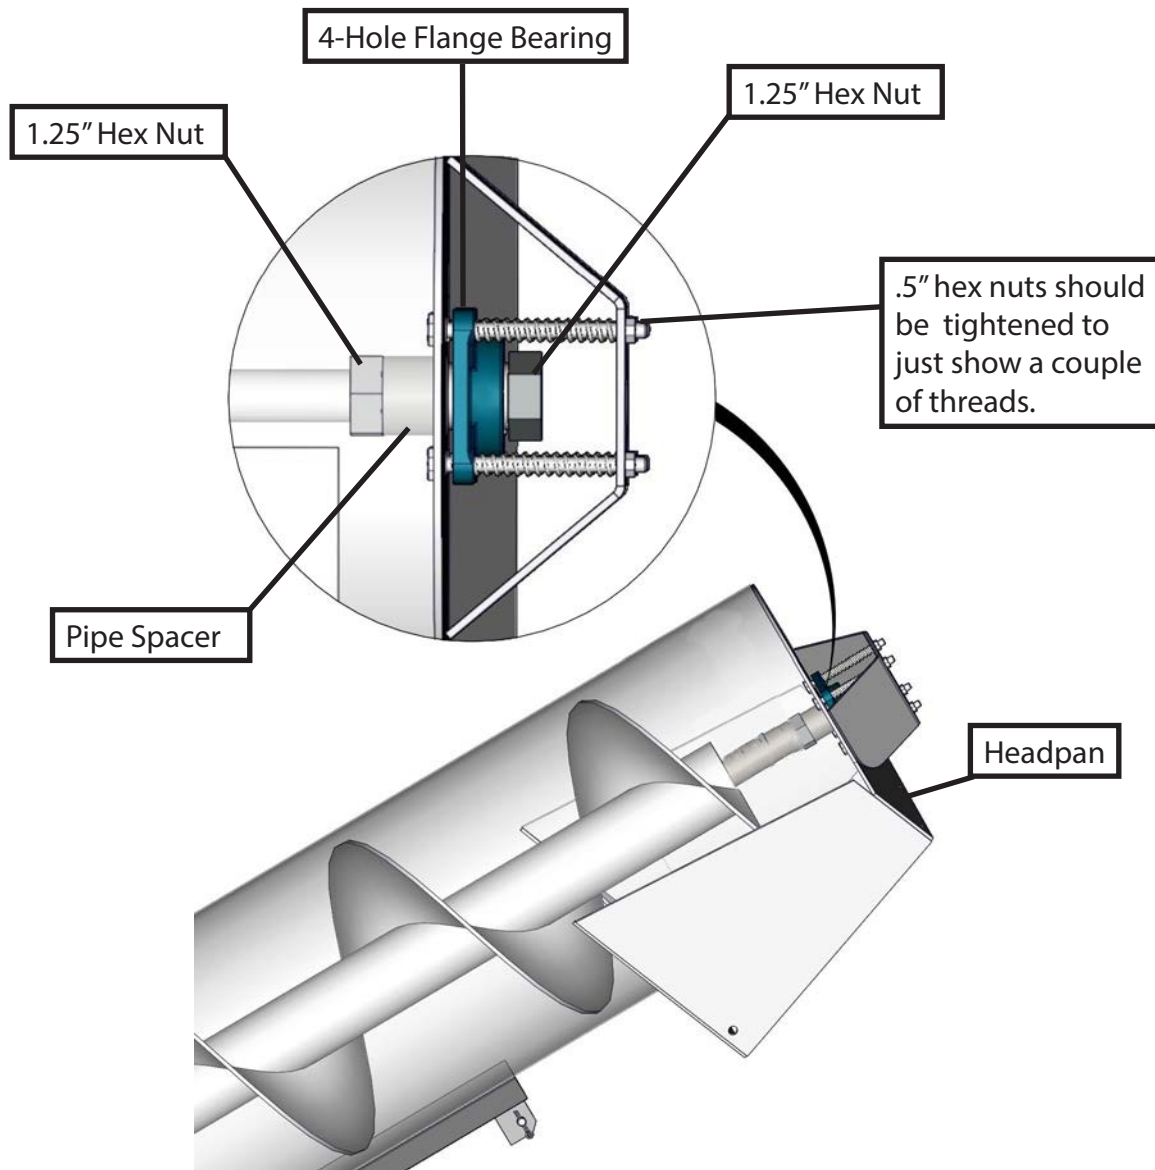


Adjustment for Standard Augers with Bearing Outside Auger Housing

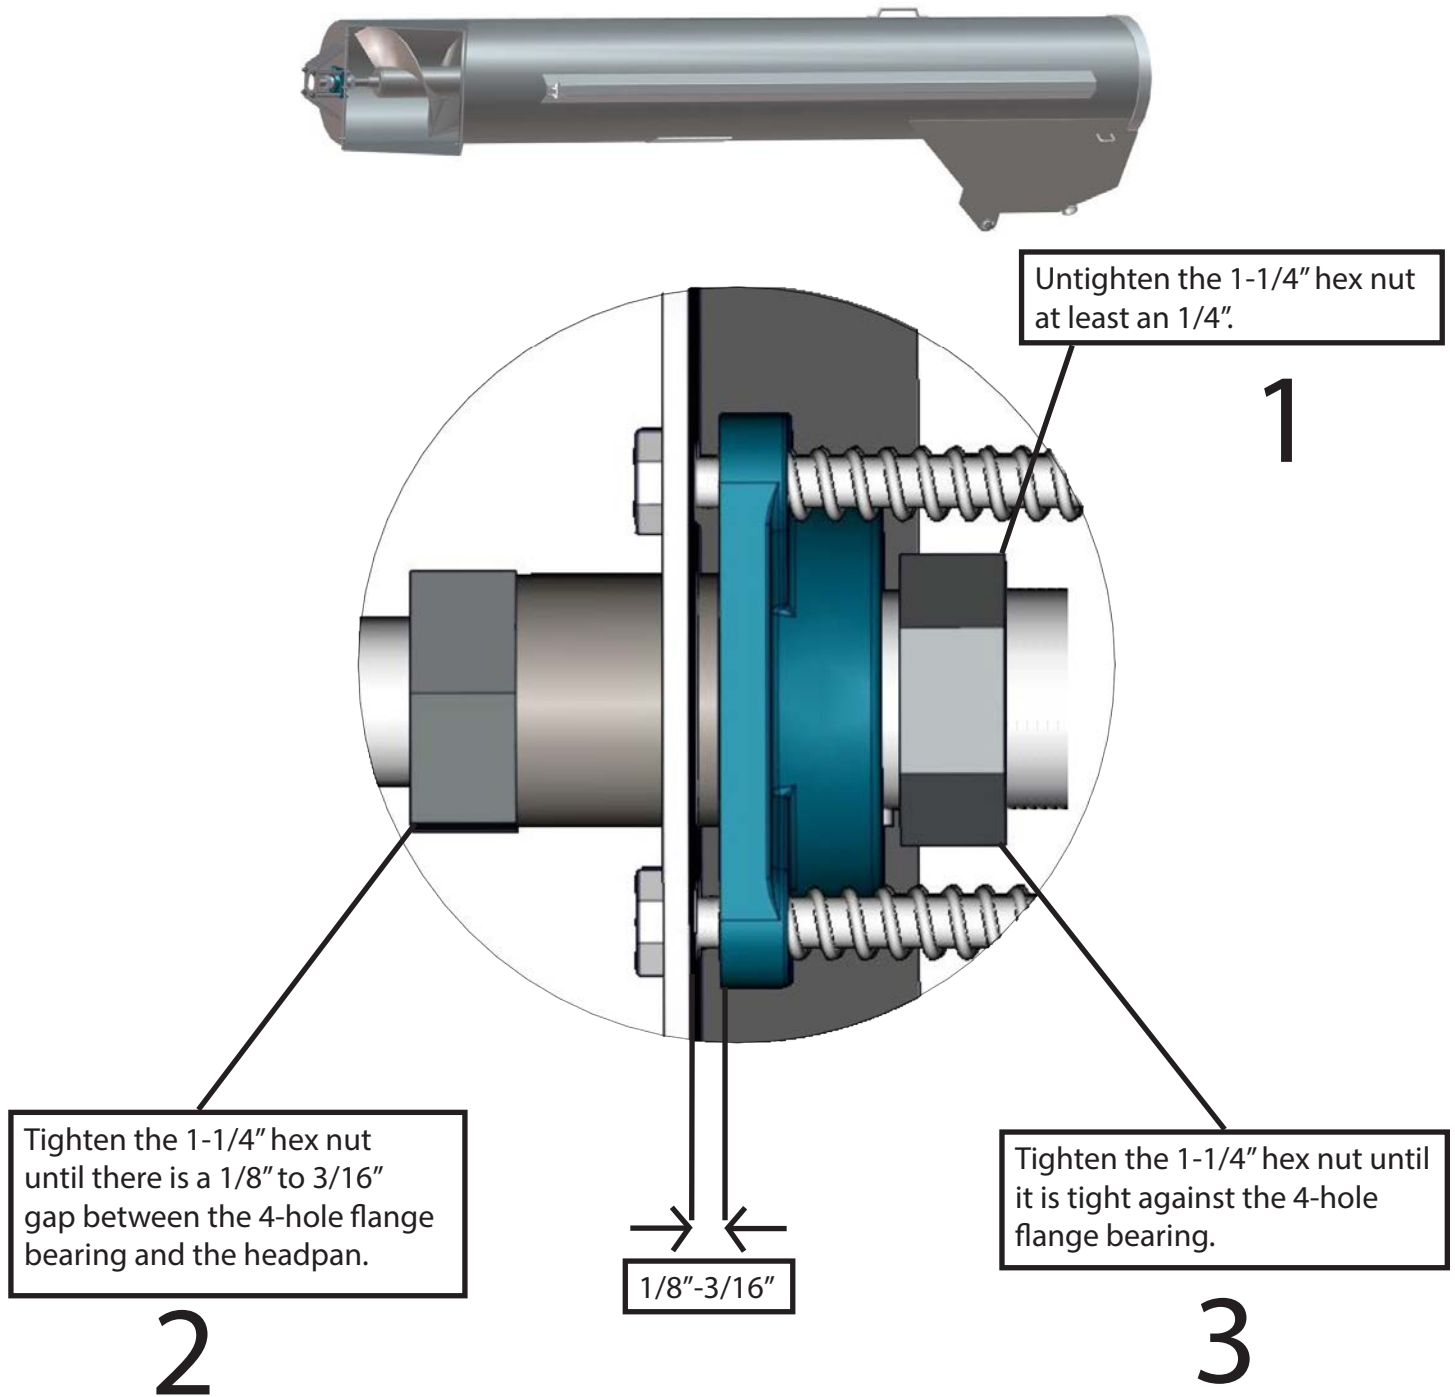


Adjustment for Augers with Bearing Inside Auger Housing

Some carts in 2016 were made with the bearing inside the housing.

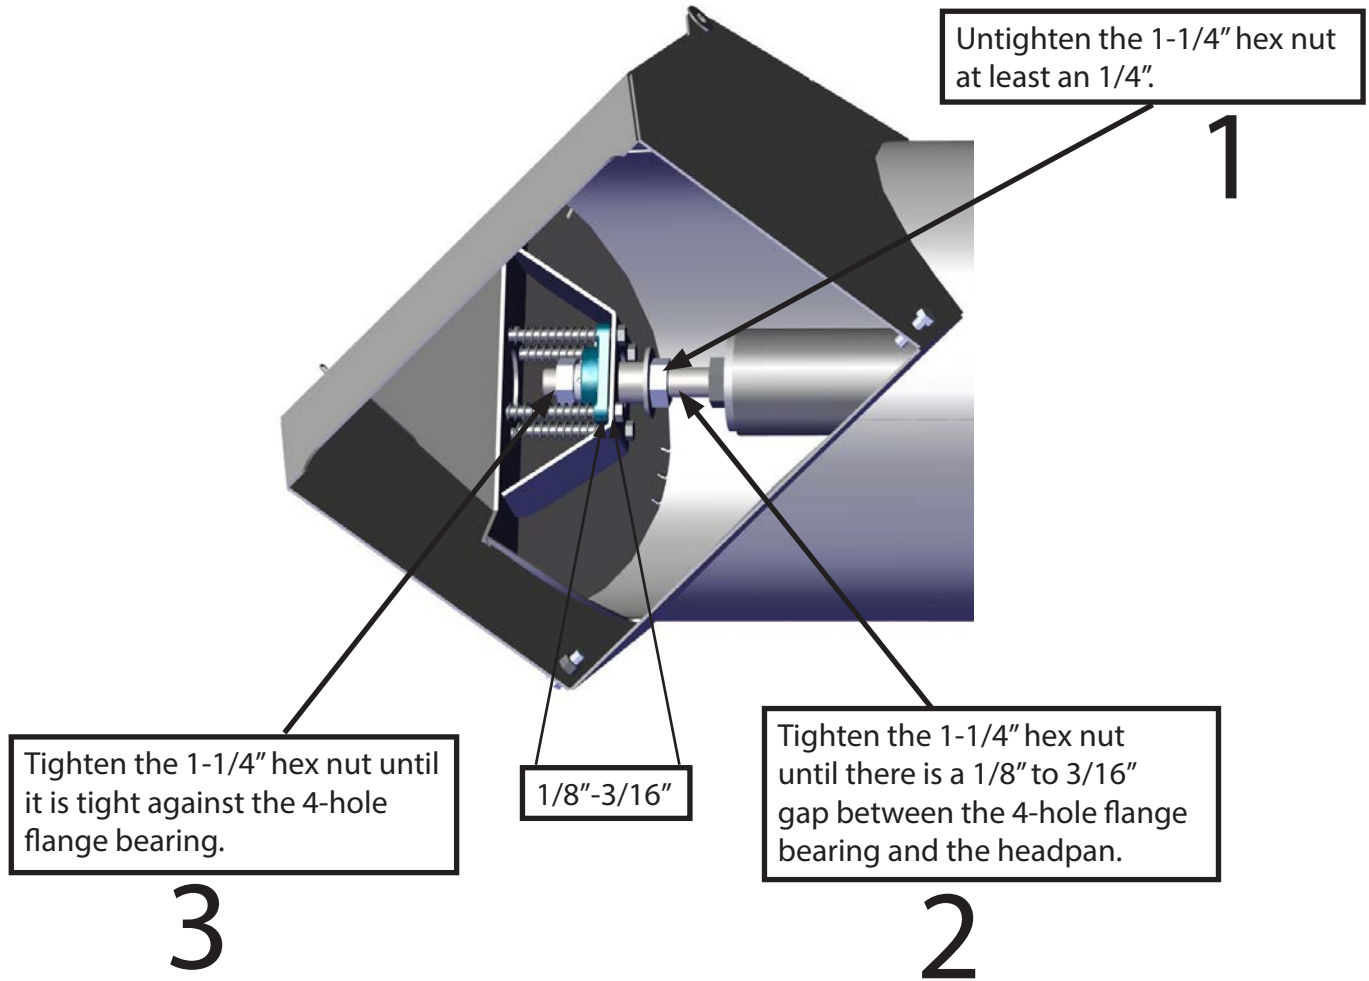


Adjustment for Sliders

Remove the sliding "sock" at the end of the auger. While the auger is still folded unpin the two sliding cylinders. Loosen the three bolts along the back of the "sock" and slide the upper auger housing off.

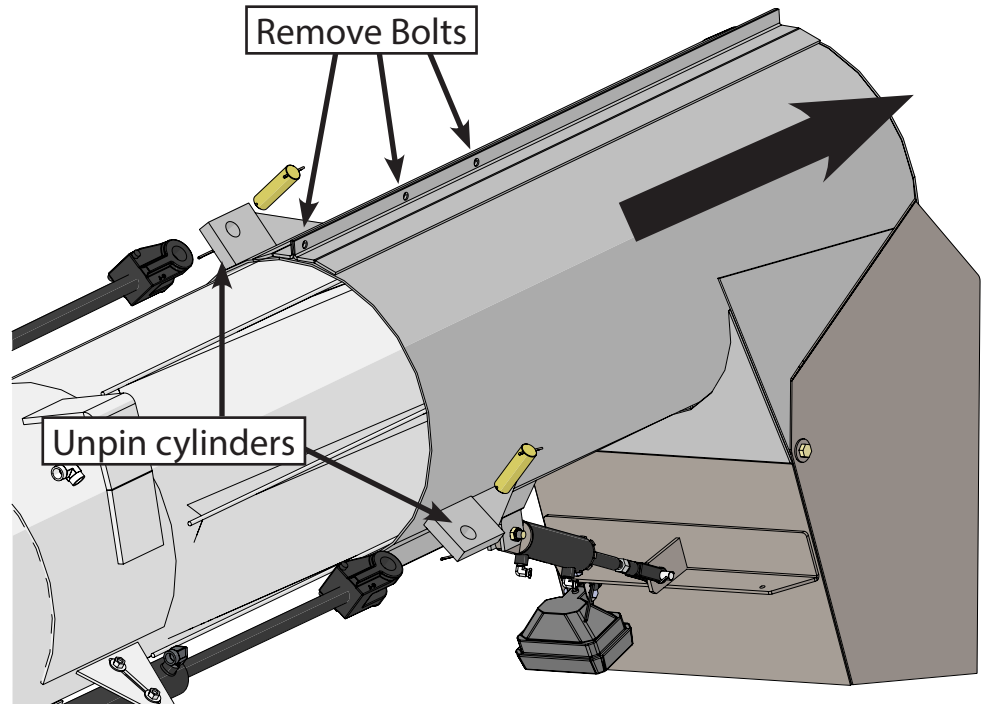

Extend the auger into the unload position. Engage the upper auger into the lower auger by rotating the driveline.

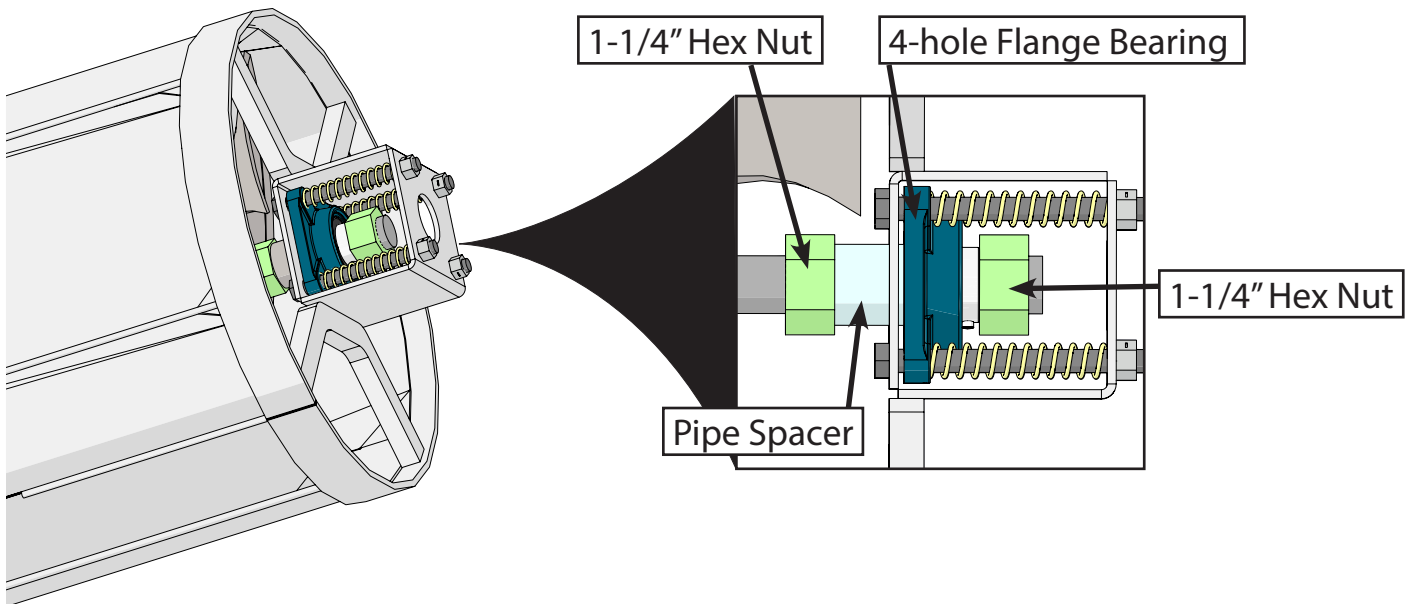

Adjustment for Sliders

